

# ProJet™ Curing System Set-Up Instructions



Once parts finishing system is set up, refer to the ProJet™ Part Washer System User Guide. Enter <http://3dpedia.3dsystems.com>. Type in the User Name : pjpw and Password: pj001. Locate the user guide under ProJet™ documentation.

1



Open Curing Unit Carton

2

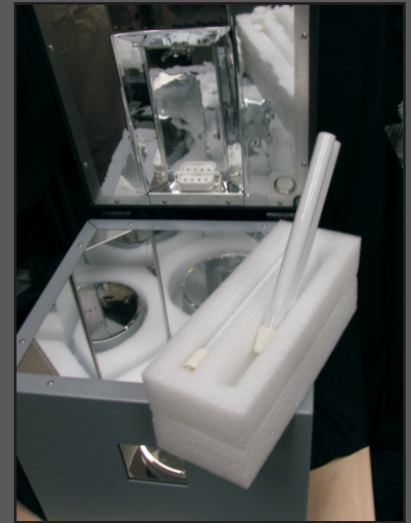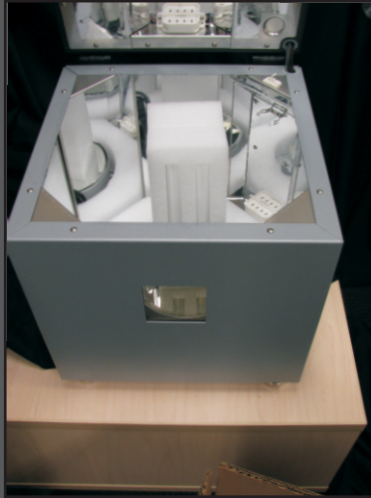


Remove styrofoam pack that contains the UV bulbs and other packing material from inside of unit.

3



Remove putty knife and clipper packs from inside of unit.

4

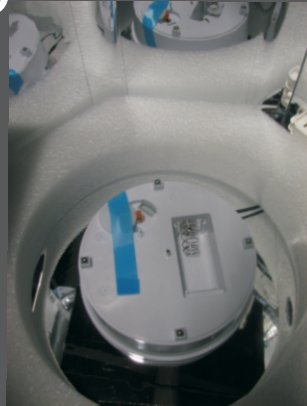

Remove the blue tape.



Locate the turn table plate from package.



Place plate on top of turn table.